


NOTE: HOLES > 3.5" REQUIRE AN ASPHALT PATCH

#### **CONDUIT UNDER CURB**

(NO SCALE)

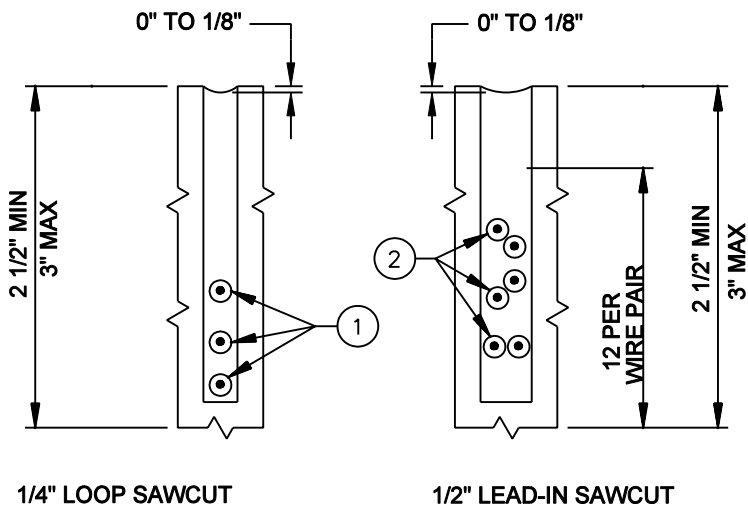

#### **NOTES:**

- ① LOOP WIRE - NUMBER VARIES (SEE LOOP WINDING DETAILS)
- ② LEAD-IN WIRES: ONE PAIR FOR EACH LOOP SERVED, THREE PAIRS MAXIMUM PER SAWCUT (SEE INSTALLATION)
3. EXTEND SAWCUT SUFFICIENT LENGTH TO PROVIDE FULL SAWCUT DEPTH AROUND CORNER

#### **CROSS-SECTION OF SAWCUTS**

(NO SCALE)

APPROVED: DON CAIRNS  
REV. DATE: NOVEMBER 01, 2005



STANDARD DETAILS

#### **SAWCUT AND CONDUIT UNDER CURB**

TRANSPORTATION DIVISION

FILE	SD456.DGN	DRAWING NO.	456
------	-----------	-------------	-----